



Mounting instruction for LOXX® fabric-to-fabric connection

LOXX® upper part
with washer

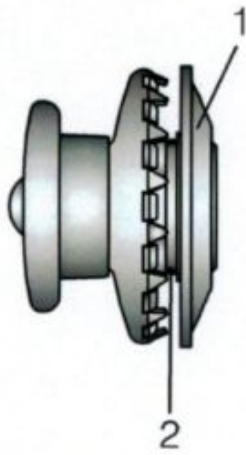

LOXX® lower part for fabric
with washer

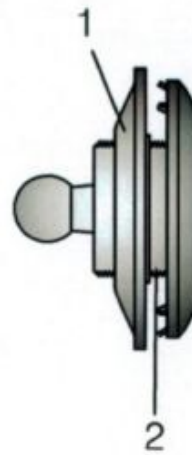

Unscrew the washer (1) of the LOXX® upper part and the LOXX® lower part for fabric with a counterclockwise rotation by using one of the mounting tools.

Stick the thread (2) of the LOXX® upper part / lower part for fabric through the pre-cut 10mm (3/8") hole in the fabric.

Following, use one of the mounting tools to tightly screw the washer (1) onto the respective thread (2).

To close, click the LOXX® upper part onto the LOXX® lower part gently pressing down.

To open, simply lift the cap of the LOXX® upper part, and the ball head will be released.

Mounting tools

